

FRONT



### B-Series Spark Tester Notifications

To download the full instruction manual, see our website: [www.clintoninstrument.com](http://www.clintoninstrument.com) or email: [support@clintoninstrument.com](mailto:support@clintoninstrument.com)

E.C.V.O

Electrode Cover is Open

E.EXI

External Interlock Not Installed

E.R.V.F

Voltage Removed During Fault

E.COM

Communication with Test Module Has been Lost

E.R.V.C

Voltage Removed by Comm Source

REAR

### Left Display Codes

### Right Display Codes



Default: **000** Test Voltage

Press **A** 1x **L.000** Percent Load

Press **A** 2x **5.000** Set Point

Default: **000** Any Fault Count

Press **B** 1x **P.000** Pinhole Count

Press **B** 2x **M.000** Metal Contact Count

Press **B** 3x **M.000** Multi Pinhole Count

Press **B** 4x **G.000** Gross Bare Wire Count

Laminated Card Dimensions: 4" x 6" Round Corner (4 corners)